

Error code	Possible reason	Solution	Note
Console No Power	1. Power Switch has been turned off	Turn on the power switch	
	2. Power switch light does not light up	Use the electric meter to check if the power socket has output the power.	Check if the voltage is 110/220V
	3. Inverter did not output DC 12V power	Replace inverter	
	4. Control wire defect	Replace control wire	
	5. Console main board defect	Replace console main board	
E01	Inverter input power with low voltage	Replace filter or chock or inverter in turn	Check if the voltage is 110/220V
E02	Inverter heat sensor abnormal	Replace inverter	
E04	Inverter output current overloading	Add lubrication oil or replace inverter	
E06	Inverter voltage overloading	Replace inverter breaker	
E08	Inverter grounding abnormal	Replace inverter	
E09	Inverter overheat	Add lubrication oil, clean inverter dust or replace inverter	
E10	Inverter sense motor overloading	Replace motor or inverter	
E11	Inverter overloading	Add lubrication oil or replace inverter	
E12	Inverter system overload error	Replace Inverter	
E13	Inverter sense motor cable disconnect	Replace motor or inverter	
E14	Inverter breaker defect	Replace inverter breaker	
E33	Inverter flash defect	Replace Inverter	
E34	Inverter flash defect	Replace Inverter	
E35	Inverter low voltage warning	Replace filter or chock or inverter in turn	Check if the voltage is 110/220V
E37	Inverter emergency stop	Replace inverter or control wires or console main board	
E41	Inverter high heat warning	Add lubrication oil, clean inverter dust or replace inverter	
E77	Inverter communication error	Replace inverter or control wires or console main board	
E78	Console membrane key error	Replace membrane key or membrane key transport board or console main board	
E79	Light sensor (A120) error	Replace or adjust light sensor or console	